

4-Way Audio/Video Selector

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack 4-Way Audio/Video Selector lets you connect multiple signal sources to a TV, VCR, or audio component that has a single input. With your audio/video selector, you can change sources with the push of one of the selector buttons.

FEATURES

Four Audio/Video Inputs — let you connect four audio/video components.

One Audio/Video Output — lets you connect the four sources to a TV, VCR or stereo.

CONNECTIONS

Connect up to four audio/video components to the selector's input jacks using stereo audio/video cable (not supplied). These cables are available at your local RadioShack store. Match the component's audio/video output jacks to the corresponding jacks on the selector's back panel.

The selector's color-coded jacks make it easy to connect components to the selector:

- Yellow jacks for video.
- Red jacks for right audio.
- White jacks for left audio.

Note: The selector is designed for connecting stereo audio/video components. If your component is monaural, you can connect it to either the left or right audio jack, for a single-channel output. To get both right and left channel audio, use an audio Y-adaptor (available at your local RadioShack store) to join the right and left audio inputs together; then connect the other end of the Y-adaptor to your monaural component's audio output jack.

For convenience, we suggest that you place a small label below each of the selector's front panel buttons to identify the component that you connected to the set of input jacks with the same number.

Use a stereo audio/video cable to connect the selector's output jacks to a TV or VCR's input jacks.

Note: For the best performance, use high-quality audio/video cables. Do not use audio cables for video.

OPERATION

Before using the selector, check all connections.

Turn on the component you wish to operate. Then press the labeled selector button to choose that component.

Use the component's controls as you would for normal operation.

CARE

To enjoy your selector for a long time:

Keep the selector dry. If it gets wet, wipe it dry immediately. Use and store the selector only in normal temperature environments. Handle the selector gently and carefully. Do not drop it. Keep the selector away from dust and dirt. Wipe the selector with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the selector's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your selector is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99